

# FastBAK

## Universal Reaction Arm

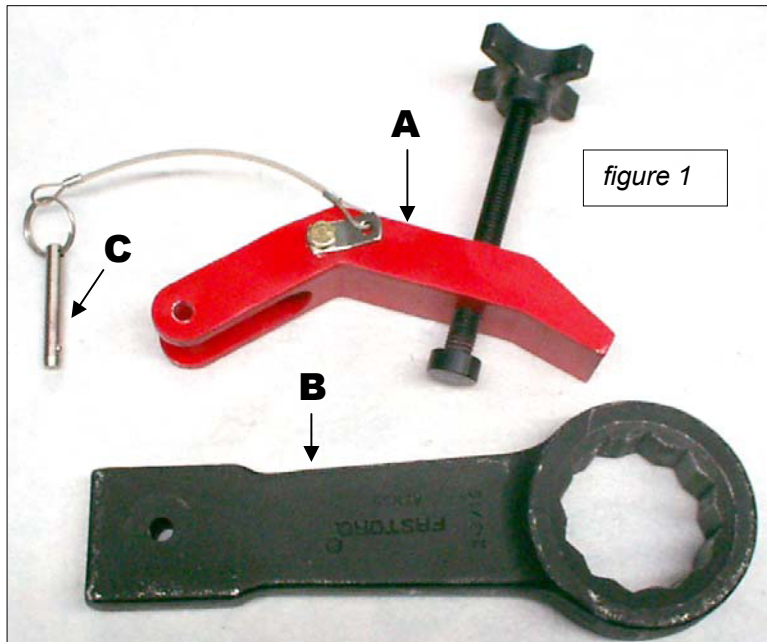


figure 1

### Instructions for use

1. Pin the Fastbak universal reaction arm (A) to the striking wrench (B) with the Speed Pin (C).

2. Position the striking wrench on the flange (D) as shown in Figure 2.

3. To release the Fastbak after the stud is tightened; turn the handle (E) counter clockwise.

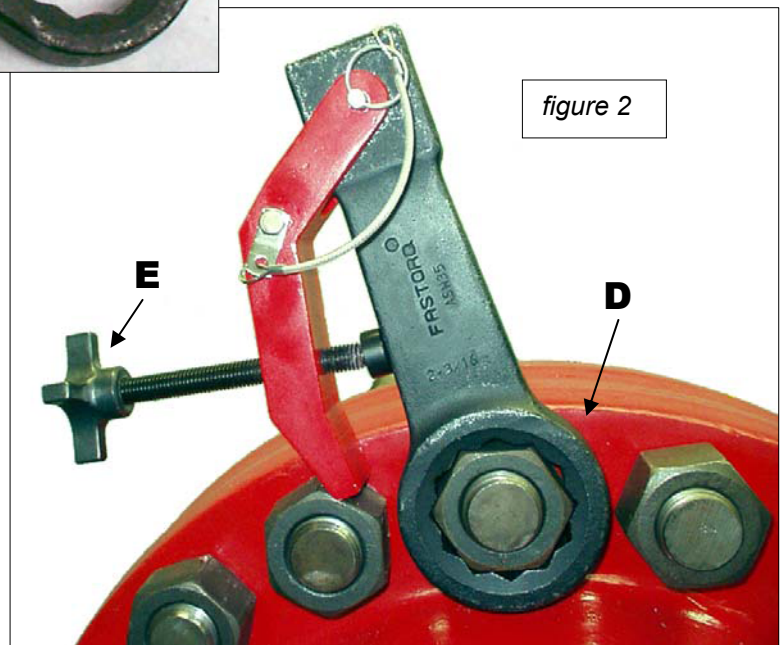


figure 2